


1. Remove trim cover.
 - a. Remove screws from front of cover.
 - b. Remove one screw hidden in top latch motor compartment.

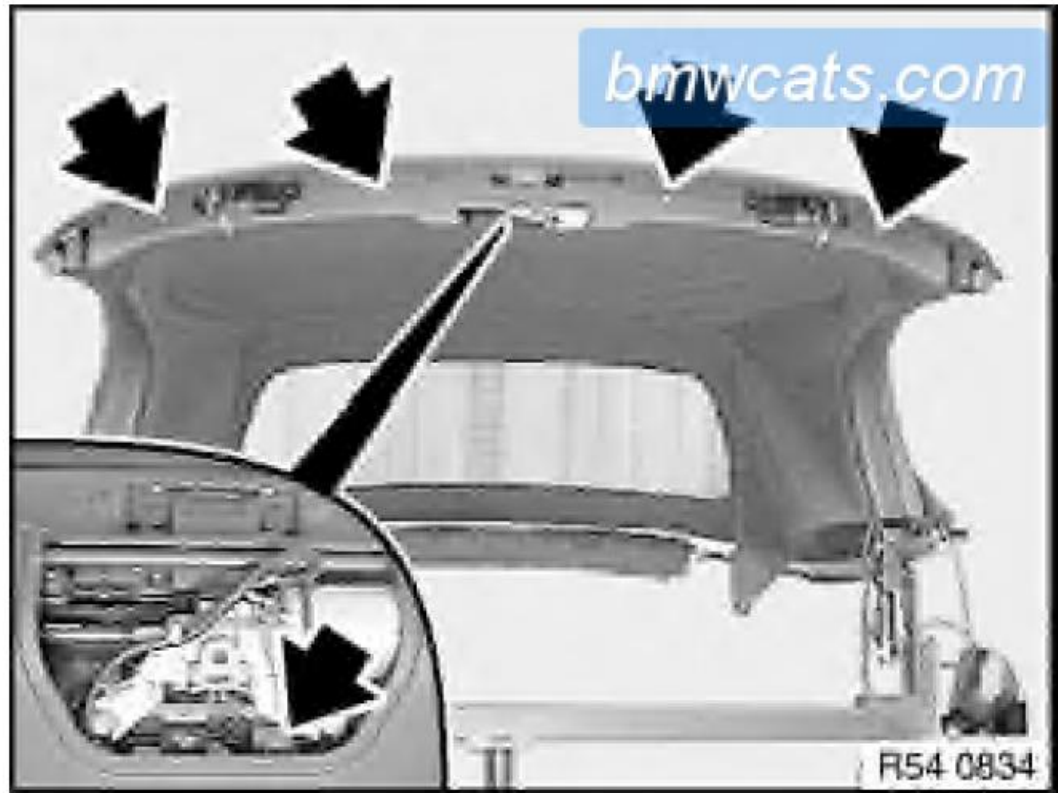

- c. Remove one screw on each side of the top.



- d. Remove the Phillips screws holding the trim piece to the head liner and work the plastic strip on the headliner out of the molded in clips in the trim piece.