
51 11 ... Removing and installing/replacing left or right front fog lamp trim (M Technic aerodynamic kit)




## Special tools required:

• 00 9 317

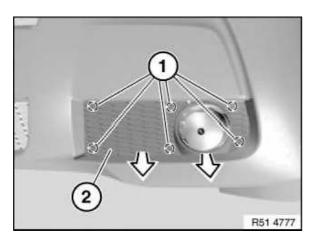

Release catches (1) on trim (2) with special tool 00 9 317 and remove trim (2).

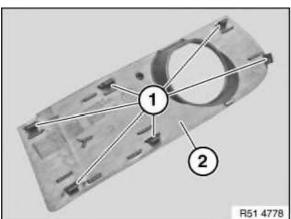

## Installation:

Retaining lugs (1) on trim (3) must not be damaged.